






**PHDN3 Galaxy**  
Decorative Range Hood**Kota Damansara, Petaling Jaya (HQ)**

Lot 11.3, 11th Floor,  
Menara Lien Hoe,  
8, Persiaran Tropicana,  
47410 Petaling Jaya,  
Selangor.

 03-780-577-25 03-780-577-25 012-228 5727 info@pacifica.my service@pacificamalaysia.com pacifica.my
 
## Installation Diagram

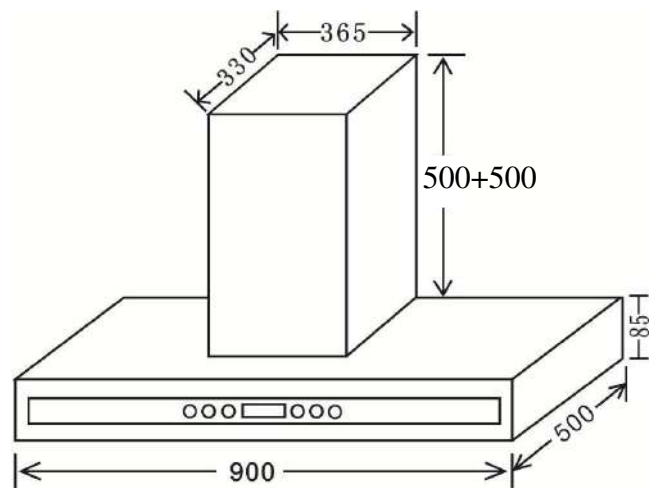

## Warranty

- This cooker hood covered by a 12 months warranty against manufacturing defects. The warranty does not cover normal wear and tear or product abuse by the consumer.
- Note Removal of the plug will VOID any warranty on your item. Please point this out to the company or person fitting the item.

## **Specifications**

Rated Input	220V~240V, 50Hz
Rated Power	271W
Lighting Power	1.5W×2
Motor Power	268W
Airflow	≥1350m <sup>3</sup> /h
Outlet Diameter	165mm

## **Cleaning & Maintenance**

**Warning: Before cleaning, please ensure that the power is switched off by detaching the plug from the wall socket.**

**10.1** Clean the surface of hood every week with mild soap or detergent . Avoid solvents, acid, alkali, scouring pads or powders that could irreparably damage the stainless steel surface.

**10.2** The grease filters may be washed using mild soap, detergent or degreasing agent.

**10.3** Charcoal filters cannot be cleaned and must be generally replaced after 6 months of use.

## **Contents**

Introduction.....	1
Features.....	2
Installation.....	3
How To Use.....	4
Lamp Change.....	5
Safety Information.....	6
Trouble Shooting.....	7
Electrical Diagram.....	8
Specifications.....	9
Cleaning & Maintenance.....	9
Warranty.....	10

## **Introduction**

**1.1** This appliance has been manufactured with materials and processes that respect the environment. We hope that you will continue this important consideration in the operation of this appliance & the disposal of the packaging materials, thank you.

**1.2** The installation work must be undertaken by a qualified technician experienced in cooker hood installation. Please connect the correct power rating (see page 6).

**1.3** The manufacturer disclaims all liability for any damage or injury caused as a result of not following the instructions for installation contained in the following text.

**1.4** The appliance is not intended for use by young children or infirm persons without supervision.

 
**1.5** Young children should be supervised to ensure that they do not play with the appliance.

**1.6** The maximum number of hobs covered by range hood should not exceed 5.


**1.7** Any modifications to the appliance, electric wire and plug is dangerous & voids the warranty.

## **Electrical Diagram**

### **Mechanical Control**

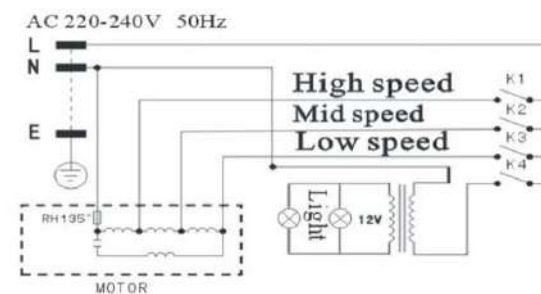

### **Touch Control**

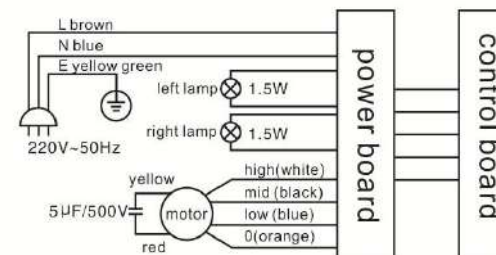 

## **Trouble Shooting**

If any problem occurs, please detach the plug from the socket and contact the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Problem	Cause	Solution
Light on, but motor does not work	The outlet valve is blocked	Detach flue and duct then turn on the hood to check if the valve opens
	The capacitor has failed	Call for technical service
	The control switch has failed	Call for technical service
Light does not work, motor does not work	No power supply	Plug another appliance into the socket to confirm there is power supply
	Fuse has blown	Open up the plug and replace the 13A fuse
Vibration	The propeller is damaged or unbalanced	Call for technical service
	The hood is not installed correctly	Review the installation instructions & check the installation again for loose screws, brackets or connections
Insufficient suction effect	The distance between the hood and the cooker is too far	Check that the distance is between 650mm to 700mm
	The filters are saturated	Clean the filters from grease residue and replace after drying.

## **Features**

**2.1** This appliance is manufactured from top quality materials, and offers superb streamlined effects.

**2.2** With high suction power and low noise, it is designed to remove cooking fumes from your kitchen quietly & effectively.

## **Installation**

3.1 The reference height from the cooker table to the bottom of the range hood is 650-750mm.

3.2 Above the cooker make three or four holes on the wall with the diameter of 8 mm and the distance between adjacent two holes is about 92.5mm (SEE INSTALLATION SKETCH).

3.3 Push the expand pipes into the holes on the wall until on the same surface with the wall.

3.4 Fix the hook on the wall with bolts.

 
3.5 Connect the outlet pipe with the outlet cover with screws.

3.6 Put the washer on the outlet of the machine, and fix the outlet cover on the outlet of the machine with screws.

3.7 Hang the machine on the hook steadily.

3.8 Cover the outlet pipe with the stainless steel decoration hood, fix the down part of the decoration hood on the machine with screws.

3.9 Adjust the height with the upper part and fix with two screws. Extend the outlet pipe out of the room with reasonable length (the extended length should be less than 2 meters).

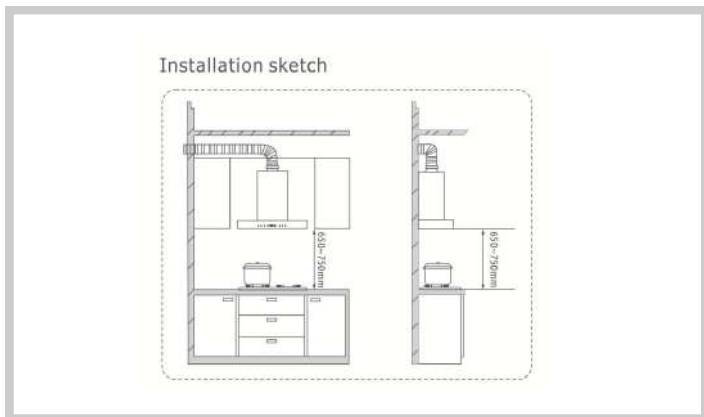


**3.7** Ensure that the wall to be installed on is sufficiently sturdy to carry the weight of the hood. It should be mounted level for best performance (see illustration).

**3.8** Do not connect to a common vent with other appliance such as gas heater, water heater, laundry dryer etc.

**3.9** The duct should not be bent more than 120 °C from the one way valve outlet to the kitchen vent.

**3.10** Check to make sure that the electric chord is not in contact with sharp edges of the appliance.

 **3.11** Be sure that the plug is accessible after installation.

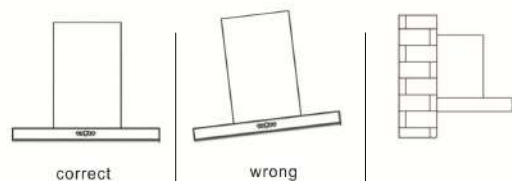


## **Safety Information**

- ◆ There must permanent & adequate ventilation of the room when operating the range hood with appliances burning gas or other fuels.
- ◆ Do not check the status of the filters when the range hood is operating, wait at least 30 minutes after switching off to avoid scalding.
- ◆ Do not touch the (Halogen) light within 30 minutes after appliance use.
- ◆ Avoid operating a gas cooker when there is no pan on the stove, it is a fire hazard and may cause damage to the hood filters.
- ◆ Disconnect the electrical plug prior to any maintenance.
- ◆ This appliance is not intended for use by young children and persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- ◆ The range hood is for home use only and is not suitable for outdoor, barbecue, and other commercial applications.
- ◆ The range hood and its filter should be cleaned regularly for best performance. Excessive gre\* Before cleaning, please confirm that the power is switched off.
- ◆ Before cleaning, please confirm that the power is switched off.
- ◆ Building regulations concerning the discharge of exhaust air have to be fulfilled.
- ◆ Don't cook with an open flame under the range hood.
- ◆ For any technical issues ensure that a suitably qualified person effects any repairs or inspection.

## **Lamp Change**

 As with any maintenance on the appliance, first turn off the power supply by unplugging from the wall socket. From the rear of the lamp socket, detach the low-voltage electric connector. Then press the lamp's clip to take out the lamp holder (see pic 7). Change the lamp (LED Lamp Max.1.5W) and then reinstall in the reverse manner.

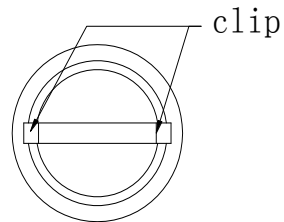


*pic 7*

## **How To Use**
 
### **3 Speed adjustment (see pic 6).**

1. Insert the electrical plug into the socket steadily and safely.
2. Touch "⏻" and the display will show "12:00", touch "⏻" for seconds, the "⏸" and "⏹" will be flashing, you can adjust the time by touch this two buttons, after 3 seconds or touch the "⏻", time will be set.
3. Touch "⏸", the indicator will be lighted, hood will start working on high speed. Touch it again, the hood stop working. You can choose the speed by touch "⏸" "⏹" and "⏸".
4. Touch "⏻", it will be flashing and "⏸" will be lighted, the hood will stop working in one minute.
5. Touch "💡", the light will be on, touch it again, it will be turned off.

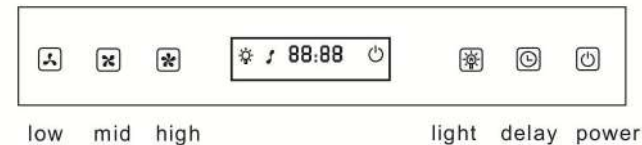

*pic 6*