



Sole Distributor:
Ge Green Sdn. Bhd.
Menara Lien Hoe (HQ)
Lot 18.2, 18th Floor,
Menara Lien Hoe,
8, Persiaran Tropicana,
47410 Petaling Jaya,
Selangor.

 03-780-577-25

 info@pacifica.my


 03-780-577-25

 pacifica.my

 012-228 5727



PHSN5 Stealth
Ventilation / Recycle Hood

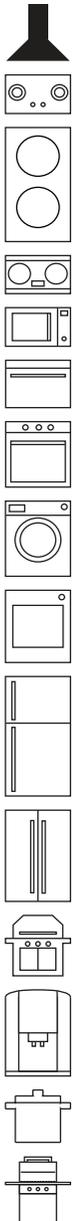

KEEP IN A SAFETY PLACE
Before operating this hood,
Please read the instruction carefully

CONTENT

WARM REMINDER	2-3
INTRODUCTION	4
SAFETY PRECAUTION	4
WALL MOUNTING INSTALLATION	5-6
CHIMNEY INSTALLATION	7-8
OPERATION	9-10
MAINTENANCE	11
TROUBLE-SHOOTING	12
ENVIRONMENTAL PROTECTION	12
ELECTRICAL DIAGRAM	13
PRODUCT REGISTRATION	14

	
Model	PHSN5
Voltage	220 V-240 V/ 50-60 Hz
Rated motor input power	380 W
Illumination	2 x 2 W (LED)
Rated input power	384 W
Suction Power	1350m ³ /h
Product Size	W895xD500xH1060 (mm)

PRODUCT REGISTRATION

Congratulation on your Pacifica AutoClean Cooker Hood purchase!
Please register your cooker hood with Warranty Card provided.

IT'S IMPORTANT

Prompt warranty registration helps in:

- Ensures product warranty coverage should you need service.
- Ownership verification for insurance (product liability insurance claim).
- Please keep your Purchase Receipt and Delivery Order for service checking appointment request.

IMPORTANT: Your warranty is valid only when this portion is returned to Ge Green Sdn. Bhd. within 14 days from the date of purchase. Please complete this warranty registration and send this to us before using your product. Registration is a condition of full warranty. Otherwise, an unregistered product will only be given a default standard product warranty of 6 months and customer is required to present legitimate proof of purchase at point of service. Failure to do so may result in charges for call-outs, delivery, parts and labour to be fully borne by customer; or in certain cases, even refusal of service coverage.


Full product warranty only by email warranty card through email info@pacificam.my or send the hard copy to Ge Green office within 14 days from the date received goods.



Standard product warranty for non-registered products or without warranty card upon service request. This also apply to showroom/roadshow display, warehouse clearance, discontinued stock clearance.



ELECTRICAL DIAGRAM

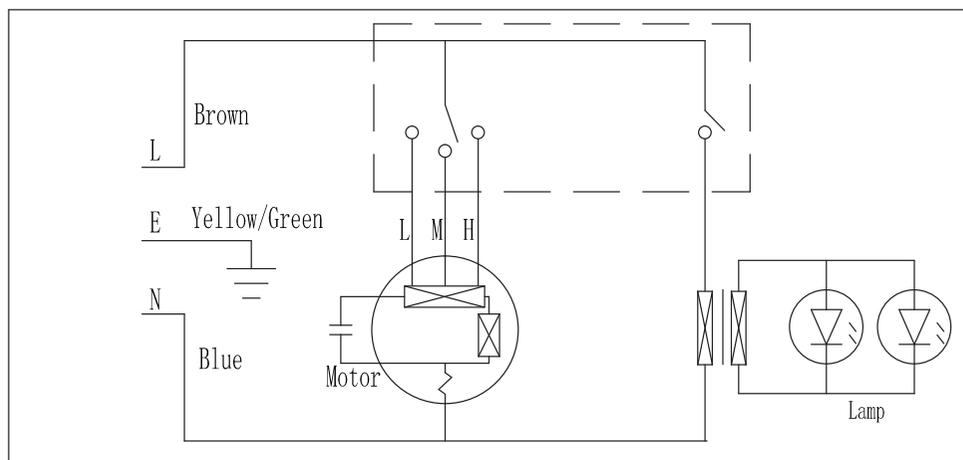

Warm Reminder

Closely follow the instructions set out in this manual. All responsibility, for any eventual inconveniences, damages or fires caused by not complying with the instructions in this manual, is declined. The hood is conceived for the suction of cooking fumes and steam and is destined only for domestic use.

The hood can look different to that illustrated in the drawings in this booklet. The instructions for use, maintenance and installation, however, remain the same.

- ! It is important to conserve this booklet for consultation at any moment. In the case of sale, cession or move, make sure it is together with the product.
- ! Read the instructions carefully: there is important information about installation, use and safety.
- ! Do not carry out electrical or mechanical variations on the product or on the discharge conduits.
- ! Before proceeding with the installation of the appliance verify that there are no damaged all components. Otherwise contact your dealer and do not proceed with the installation.

Note: the elements marked with the symbol “(*)” are optional accessories supplied only with some models or elements to purchase, not supplied.



CAUTION

WARNING!

- ! Do not connect the appliance to the mains until the installation is fully complete.
- ! Before any cleaning or maintenance operation, disconnect hood from the mains by removing the plug or disconnecting the mains electrical supply.
- ! Always wear work gloves for all installation and maintenance operations.
- ! The appliance is not intended for use by children or persons with impaired physical, sensorial or mental faculties, or if lacking in experience or knowledge, unless they are under supervision or have been trained in the use of the appliance by a person responsible for their safety.
- ! This appliance is designed to be operated by adults, children should be monitored to ensure that they do not play with the appliance.
- ! This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the appliance.
- ! Never use the hood without effectively mounted grating!
- ! The hood must NEVER be used as a support surface unless specifically indicated.
- ! The premises where the appliance is installed must be sufficiently ventilated, when the kitchen hood is used together with other gas combustion devices or other fuels.
- ! The ducting system for this appliance must not be connected to any existing ventilation system which is being used for any other purpose such as discharging exhaust fumes from appliances burning gas or other fuels.
- ! The flaming of foods beneath the hood itself is severely prohibited.
- ! The use of exposed flames is detrimental to the filters and may cause a fire risk, and must therefore be avoided in all circumstances
- ! Any frying must be done with care in order to make sure that the oil does not overheat and ignite.
- ! Accessible parts of the hood may become hot when used with cooking appliance.
- ! With regards to the technical and safety measures to be adopted for fume discharging it is important to closely follow the regulations provided by the local authorities.
- ! The hood must be regularly cleaned on both the inside and outside (AT LEAST 2 WEEKS ONCE).
- ! This must be completed in accordance with the maintenance instructions provided in this manual. Failure to follow the instructions provided in this user guide regarding the cleaning of the hood and filters will lead to the risk of fires.
- ! Do not use or leave the hood without the lamp correctly mounted due to the possible risk of electric shocks.
- ! We will not accept any responsibility for any faults, damages or fires caused to the appliance as a result of the nonobservance of the instructions included in this manual.
- ! By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For further detailed information regarding the process, collection and recycling of this product, please contact the appropriate department of your local authorities or the local department for household waste or the shop where you purchased this product.

Suggestions for a correct use in order to reduce the environmental impact: Switch ON the hood at minimum speed when you start cooking and kept it running for few minutes after cooking is finished. Increase the speed only in case of large amount of smoke and vapour and use boost(s) only in extreme situations. Clean the baffle filter(s) 2 weeks once to maintain a good grease filter efficiency. Use the maximum 78-84 diameter of the ducting system to optimize efficiency and minimize noise.

Additional Installation Specifications:

Use only the fixing screws supplied with the product for installation or, if not supplied, purchase the correct screws type. Use the correct length for the screws which are identified in the Installation Guide. In case of doubt, consult an authorised service assistance centre or similar qualified person.

WARNING! Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.

USE

The hood is designed to be used either for exhausting or filter version.



Ducting version

In this case the fumes are conveyed outside of the building by means of a special pipe connected with the connection ring located on top of the hood.

Attention! The exhausting pipe is not supplied and must be purchased apart.

Diameter of the exhausting pipe must be equal to that of the connection ring.

In the horizontal runs the exhausting pipe must be slightly slanted (about 10°) and directed upwards to vent the air easily from the room to the outside.

Attention!

Connect the hood and discharge holes on the walls with a diameter equivalent to the air outlet.

Using the tubes and discharge holes on walls with smaller dimensions will cause a diminution of the suction performance and a drastic increase in noise.

Any responsibility in the matter is therefore declined.

! Use a duct of the minimum indispensable length.

! Use a duct with as few elbows as possible (maximum elbow angle: 90°).

! Avoid drastic changes in the duct cross-section.

! Use a duct as smooth as possible inside.

! The duct must be made of certified material.

CAUTION

- For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapors. Take extra care when using detergent for cleaning. Suitable for use in domestic household cooking area.
- AutoClean the cooker hood frequently. Grease should not be allowed to accumulate on fan or baffle filter.
- Keep fan & baffle filter surface clean.
- Use high speed setting on hood only when necessary.
- Dont leave the cooker hood unattended when cooking.
- Installation work and electrical wiring must be done by qualified installer in accordance with all applicable codes and standards.
- Sufficient air is needed for power combustion and exhausting of smoke through the ducting to prevent back-drafting. Follow the manufacturer's guideline and safety standard advice.
- When cutting or drilling into wall, roof or ceiling, do not damage electrical wiring and other hidden utilities.
- Ducted fans must always vent to the outdoors.
- NEVER place a switch where it can be reached from a water sink or shower place.
- Make sure the power is off before installing, wiring, maintenance & service cleaning.

TROUBLE-SHOOTING

Fault	Cause	Solution
Light on, but fan does not work.	The fan blade is jammed.	Switch off the unit and repair by qualified service personnel only.
	The motor is damaged.	
Both light and fan do not work	Light bulb burn.	Replace the bulb with correct rating.
	Power cord looses.	Plug in to the power supply again.
Serious Vibration of the unit	The fan blade is damaged.	Switch off the unit and repair by qualified service personnel only
	The fan motor is not fixed tightly.	Switch off the unit and repair by qualified service personnel only
	The unit is not hung properly on the bracket.	Take down the unit and check whether the bracket is in proper location.
Suction performance not good	Too long distance between the unit and the cooking plane.	Readjust the distance to 65-75cm

ENVIRONMENTAL PROTECTION

Waste electrical products should not be disposed off with household waste. Please recycle where facilities exist. Check with Local Authority or retailer for recycling advice.



MAINTENANCE

Before cleaning switch the unit off and unplug the appliance.

i. Regular Cleaning

Use a soft cloth moistened with hand-warm mildly soapy water or household cleaning detergent. Never use metal pads, chemical, abrasive material or stiff brush to clean the unit.

ii. Monthly Cleaning for Grease Filter

ESSENTIAL: Clean the filter every month can prevent any risk of fire. The filter collects grease, smoke and dust... so the filter is directly affecting the efficiency of the cooker hood. If not cleaned, the grease residue (potential flammable) will saturate on the filter. Clean it with household cleaning detergent.

iii. Annual Cleaning for Activated Carbon Filter

Apply SOLELY to unit that installed as a recirculation unit (not vented to the outside). This filter traps odours and must be replaced at least once a year depending on how frequent the cooker hood is used.

iv. Bulb Replacement

1. Switch the unit off and unplug the appliance.
2. Remove the lamp cover by unscrewing the 2 screws.
3. Unscrew the incandescent bulb.
4. Replace with the same type and rated bulb/lamp.
L10-Square Shape LED-2W

INTRODUCTION

Thank you for choosing this cooker hood.

This instruction manual is designed to provide you with all required instruction related to the installation, use and maintenance of the appliance.

In order to operate the appliance correctly and safely, please read this instruction manual carefully before installation and using.

SAFETY PRECAUTION

1. Never let the children operate the appliance.
2. The cooker hood is for home use only, not suitable for commercial purpose.
3. The cooker hood and its filter should be cleaned regularly in order to keep in good working condition.
4. Clean the appliance according to the instruction manual and keep the appliance from danger of burning. There is a fire risk if cleaning is not carried out in accordance with the instruction.
5. Please keep the kitchen room a good convention before connecting this appliance; Please check to ensure that the power supply cord is not damaged. A damaged supply cord must be replaced by qualified service personnel only.
6. There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels; the air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.
7. Regulations concerning the discharge of air have to be fulfilled.
8. Do not flame under the range hood.
9. This appliance can be used by children aged from 8 years and above and person with reduced physical, sensory or mental capabilities or lack experience and knowledge if they have been given supervision or instruction.

concerning use of the appliance in safe way and understand the hazards involved. Children shall not play with appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

CAUTION: Accessible parts may become hot when used with cooking appliance.


Electrical Shock Hazard

Only plug this unit in to a properly earthed outlet. If in doubt, seek advice from a suitably qualified engineer.


WALL MOUNTING INSTALLATION

1. Prepare for installation:

- a. If you have an outlet to the outside, your cooker hood can be connected as below picture by means of an extraction duct (with an interior diameter of 150mm)

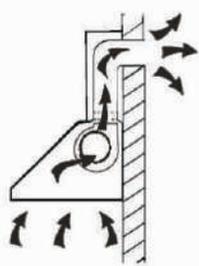

- b. Before installation, turn the unit off and unplug it from the outlet.

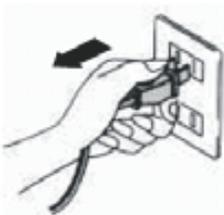

- c. The cooker hood should be placed at a distance of 65-75cm above the

Touch control (T13)



After plug in power, the appliance is in STANDBY mode automatically. Press any key and hold 0.5S (Except "Power" button), into corresponding function. Speed -select to suit cooking conditions

- ✎ Low Speed button
It's used for Ventilation on the kitchen. It is suitable for simmering and cooking which do not make much steam.


- ✎ Medium Speed button
Aiflow speed is ideally for ventilation in standard cooking operation.

- ✎ High Speed button
When high density of smoke or steam is produced, press high-speed button for highest efficiency ventilation.

- ⏻ Power
Press "Power" to turn off the motor (no effect for lights), and it comes back to STANDBY mode.

- ✎ Light button
Turn on/off light
NOTE: "Light" button is independent control, not affected by the power button.

OPERATION

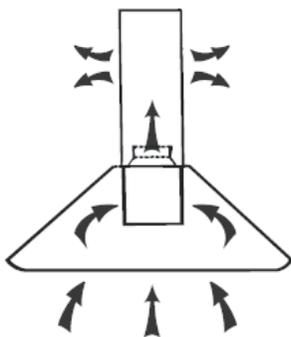


Activated carbon filter can be used to trap odors.

In order to install the activated carbon filter, the grease filter should be detached first. Press the lock and pull it downward.




Plug the activated carbon filter into the unit and turn it in clockwise direction. Repeat the same on the other side.

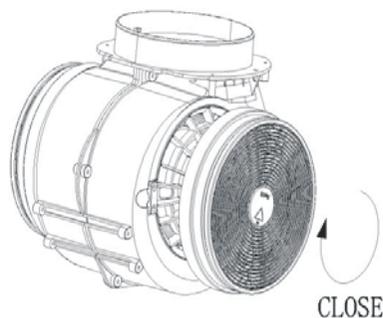

NOTE:

1. Make sure the filter is securely locked. Otherwise, it could be loosen and may cause dangerous consequences.
2. When activated carbon filter is attached, the suction power will be lowered.


cooking plane for best result.

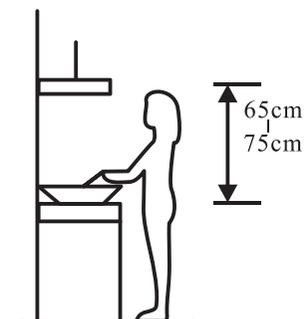

2. Installation (Vent outside):


Attention! Observe the warning in the instruction sheet concerning the operation of the appliance when air is discharged from the room.

Drill 3 x 8mm holes to accommodate the bracket. Screw and tighten the bracket onto the wall with the screws & screw plugs provided.

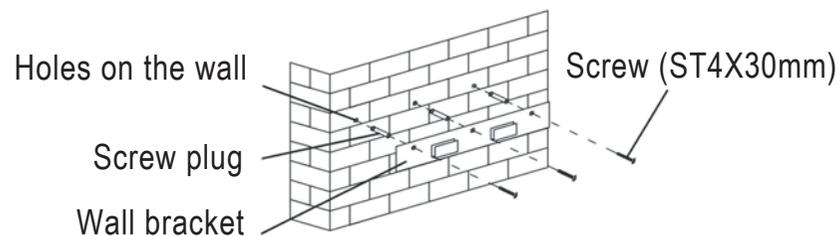


Lift up the cooker hood and hang onto the wall bracket hook.

CHIMNEY INSTALLATION

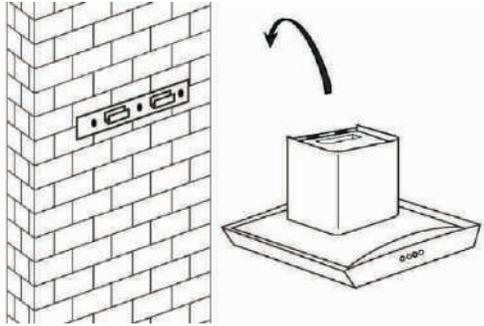


Fix the one-way-valve to the air outlet of the cooker hood. Then, attach the exhaust pipe onto the one-way-valve as shown below

Aluminium soft piping/ducting
to fix on air outlet

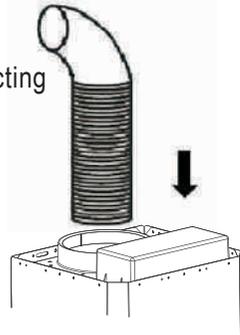




Put the upper chimney into lower chimney. Then pull out the upper chimney upwards. Adjust to reach the height required.

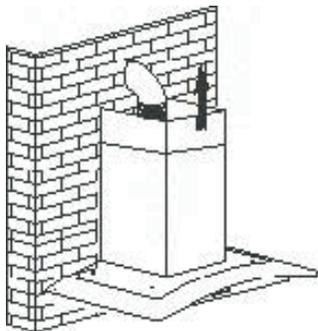


Measure the appropriate height and drill 2 x 8mm holes to accommodate the plate. Screw and tighten the upper wall with 2 screws provided.

There are 2 methods for installing the chimney cover. Please check the below pic for references.

1. After drilling the 2 holes and fixed the hook, hang the chimney cover by matching the both side lock. (Pic1)
2. After drilling the 2 holes and fixed the hook, install the chimney cover by locking with 2 screws in both side holes. (Pic2)

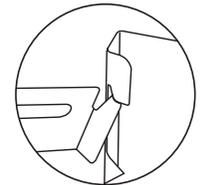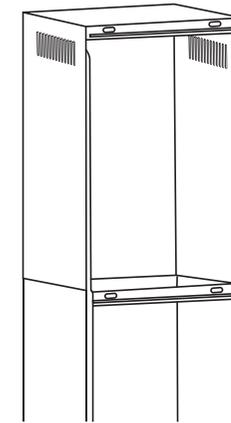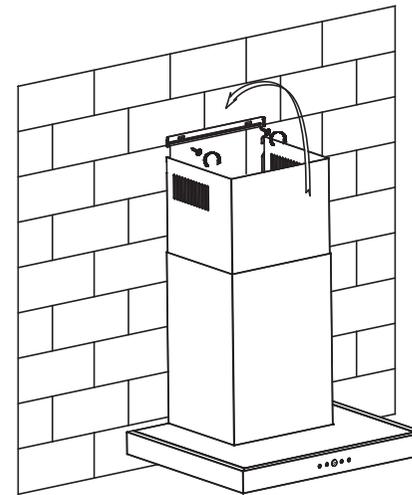

(Pic1)

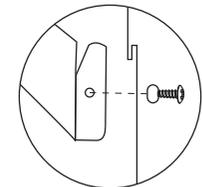

(Pic2)

(3*10mm Screw)

Note:

There are 2 methods for installing the inner chimney cover. (Pic 1 & Pic 2)
However, there is only 1 method for installing the outer chimney. (Pic 1)

3. Installation (Vent inside)

If you do not have an air outlet to the outside, exhaust pipe is not required and the installation is similar to the one shown in Page 5.