CADANGAN MENDIRIKAN 1 BLOK PEMBANGUNAN 32 TINGKAT YANG MENGANDUNGI 1 BLOK PODIUM 7 TINGKAT TERMASUK KEDAI 3 TINGKAT (51 UNIT), LOT-LOT KEDAI 1 TINGKAT (33 UNIT), TEMPAT LETAK KERETA 3 TINGKAT, DAN KEMUDAHAN MASYARAKAT ATAS BUMBUNG PODIUM, DENGAN 1 BLOK (A) PANGSAPURI PERKHIDMATAN 25 TINGKAT (106 UNIT) DAN 1 BLOK (B) PANGSAPURI PERKHIDMATAN 24 TINGKAT (100 UNIT) DI ATAS SEBAHAGIAN LOT 5784, MUKIM 12, DAERAH BARAT DAYA, JALAN PERMATANG DAMAR LAUT, BATU MAUNG. PULAU PINANG.

UNTUK

TETUAN VIENNA VIEW DEVELOPMENT SDN. BHD.

OPERATION MANUAL

&

AS BUILT DRAWINGS





PRF102 Mars

Freestanding refrigerator



Contents

1.	SAFETY INFORMATIONS	1
2.	INSTALLATION	2
3.	PRODUCT OVERVIEW	5
4.	OPERATION	6
5.	CLEANING	7
6.	MAINTENANCE	7
7.	Trouble shooting	8
8.	TIPS FOR ENERGY SAVING	9
9.	DISPOSAL	9

1. SAFETY INFORMATIONS

Before operating the appliance, please read this manual thoroughly and retain it for your reference

WARNING **1**



- 1. Keep ventilation open, in the appliance enclosure or mounting structure, clear of obstruction.
- 2. Do not use mechanical devices or any other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- 3. Do not damage the refrigerant circuit.
- 4. Do not use electrical appliances inside the refrigerator/freezer, unless they are of the type recommended by the manufacturer.
- 5. Before changing the interior light, unplug the appliance from the power supply. If you experience difficulty when changing the light, contact service center.
- 6. The appliance is not intended for use by children or infirm persons without supervision. Children should be supervised to ensure that they do not play with the appliance.
 - Do not let children hang on the door. If not, a serious injury may occur.
- 7. Do not bend the power cord excessively or place heavy articles on it.
 - This may constitutes a fire hazard.
- 8. Have the power cord repaired or replaced immediately by the manufacturer or its service agent if Power cord has become frayed or damaged.
- 9. Do not use a cord that shows cracks or abrasion damage along its length or at either end.
- 10. If the power cord is damaged, have it replaced immediately by the manufacturer or its service agent.
- 11. When moving the refrigerator, be careful not to roll over or damage the power cord. Do not insert the power plug with wet hands.
- 12. Unplug the refrigerator before cleaning or during repairs.
- 13. Do not use a wet or damp cloth when cleaning the plug.
- 14. Remove any foreign matter or dust from the power plug pins.- Otherwise there is a risk of fire.
- 15. If the refrigerator is disconnected from the power supply, you should wait for at least ten minutes before plugging it back.
- 16. If the wall socket is loose, do not insert the power plug.- There is a risk of electric shock or fire.
- 17. The appliance must be positioned so that the plug is accessible after installation.
- 18. Please dispose the refrigerator according to local regulation as it use flammable refrigerant.
- 19. Before you scrap the appliance, please take off the doors to prevent children trapped.
- 20. This appliance is intended to be used in household.
- 21. Do not store explosive substances such as aerosol cans with a flammable propellant in the fridge.
- 22. Do not dismantle or repair the refrigerator by yourself.- It may cause a fire, malfunction and/or personal injury.
- 23. Please contact service center if you smell pharmaceutical or smoke, switch off the fridge or pull out power plug immediately.



IT IS HAZARDOUS FOR ANYONE OTHER THAN AUTHORISED SERVICE PERSONNEL TO CARRY OUT SERVICING OF REPAIRS WHICH INVOLVE THE REMOVAL OF COVERS.



TO AVOID THE RISK OF AN ELECTRICAL SHOCK DO NOT ATTEMPT REPAIRS YOURSELF.

2. INSTALLATION

2.1 Location

- 1. Do not install the refrigerator in a damp place or place where it may come in contact with water. Deteriorated insulation of electrical parts may cause an electric shock or fire.
- 2. Do not place this refrigerator in direct sunlight or expose to the heat from stoves, room heaters or other appliance.
- 3. Allow sufficient space to install the refrigerator on a flat surface.- If your refrigerator is not level, the internal cooling system may not work correctly.
- 4. Do not share plug with several appliances into the same multiple power board. The refrigerator should always be plugged into its own electrical point which has a voltage rating that matched therating plate. This provides the best performance and also prevents overloading house wiring circuits, which could cause a fire hazard from overheated wires.
- 5. Never unplug your refrigerator by pulling on the power cord. Always grip plug firmly and pullstraight out from the outlet.- Damage to the cord may cause a short-circuit, fire and/or electric shock.
- 6. Make sure that the power plug is not squashed or damaged by the back of the refrigerator.
- 7. Extreme cold ambient temperatures may also cause the unit not to perform properly.
- 8. This unit is not designed for use in a garage or outdoor installation.
- 9. Do not drape the unit with any covering.

When install the fridge, ensure that 10 cm of free space is left at both sides, 10 cm at the rear and 30 cm at the top of the unit. This will allow cold air to circulate around the wine cooler and improve the efficiency of the cooling process.

2.2 Reversing the Door Swing


STEP 1

Remove the screws of the upper hinged cover and that top hinged cover on one side.



STEP 2

Remove the middle hinge, lower hinge and door. Later, remove the upper, middle and lower hinges on the other side.

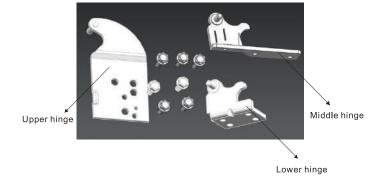


STEP 3

Install the lower hinges. Then put on the middle hinge after the door is put in place. Follow by install the refrigerator door and then put on the upper hinge and cover.




STEP 4

Adjust the height of the adjustable foot of the lower hinge.

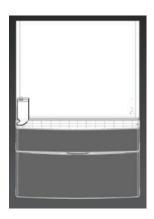

2.3 Door Space Requirements


The unit's door must be able to open fully as shown. W×D≥1180×1150mm

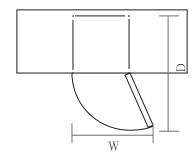

2.4 Leveling The Unit

To do this adjusts the two levelling feet at the front of the unit. If the unit is not level, the door and magnetic seal alignments will not be covered properly.

Make sure that the foot touches the ground before use.

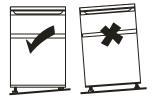

2.5 Cleaning Before Use

Wipe the inside of the unit with bicarbonate soda. Rinse with warm water using a 'Wrung-out' sponge or cloth. Wash the shelves and salad bin in warm soapy water and dry completely. Please clean the exterior of the unit with a damp cloth.

- ◆ The refrigerator adopts 220~240V/50Hz AC power, voltage fluctuations over the range of 187 ~ 264V will cause malfunction or even damage, so a 750 W automatic voltage regulator must be installed in concert with the AC power.
- ◆ Do not damage the power cord under any condition so as to ensure safety use, do not use when the power cord is damaged or the plug is worn.
- ◆ Do not put flammable, explosive, volatile and highly corrosive items in the refrigerator to prevent damages to the product or fire accidents.
- ◆ This product is household refrigerators and shall be only suitable for the storage of foods. According to national standards, household refrigerators shall not be used for other purposes, such as storage of blood, drugs or biological products.
- Do not place items such as bottled or sealed container of fluid such as bottled beers and beverages in the freezer to prevent bursts and other losses.
- ♦ Before placing any food in your unit, switch on for 24 hours, to make sure it is working properly and to allow it time to fall to the correct temperature. Your unit should not be overfilled.
- This product is intended only for the storage of food in a domestic environment.
- ♦ Manufacturer's recommended storage times should be adhered to. Refer to relevant instructions.
- Bottle should be stored tightly together so that they do not fall out.
- Do not place carbonated or fizzy drinks in the freezer compartment.
- ◆ Do not overfill the refrigerator with food.
 - o When you open the door, an item may fall out and cause personal injury or material damage.
- ◆ Do not put bottles or glass containers in the freezer.
 - o When the contents freeze, the glass may break and cause personal injury.
- ◆ Do not spray inflammable gas near the refrigerator.
 - o There is a risk of explosion or fire.
- ◆ Do not directly spray water inside or outside the refrigerator.
 - o There is a risk of fire or electric shock.
- Do not store volatile or flammable substances in the refrigerator.
 - o The storage of benzene, thinner, alcohol, ether, LP gas and other such products may cause explosions.
- If you have a long vacation planned, you must empty the refrigerator and switch off.
- ◆ Do not re-freeze frozen foods that have thawed completely.
- Do not store pharmaceuticals products, scientific materials or temperature-sensitive products in the refrigerator. Products that require strict temperature controls must not be stored in the refrigerator.
- ◆ Do not put a container filled with water on the refrigerator. If spilled, there is a risk of fire or electric shock.



Before Plugging in

You must check that you have a socket which is compatible with the plug supplied with the unit.

♦ Before Switch On!

Do not turn on until two hours after moving the unit.

2.7 Interior Accessories

Various glass or plastic storage shelves are included with your appliance - different models have different combinations.


You should always slide one of the full size glass storage shelves into the lowest set of guides, above the fruit and vegetable containers, and keep it in this position. To do this, pull the storage shelf forward until it can be swiveled upwards or downwards and removed.

Please do the same in reverse to insert the shelf at a different height.



In order to maximize the volume of the fresh food storage compartment and Frozen-food storage compartment, the user can remove one or more shelves, drawers, out from the fridge, according to your daily use.

PRODUCT OVERVIEW

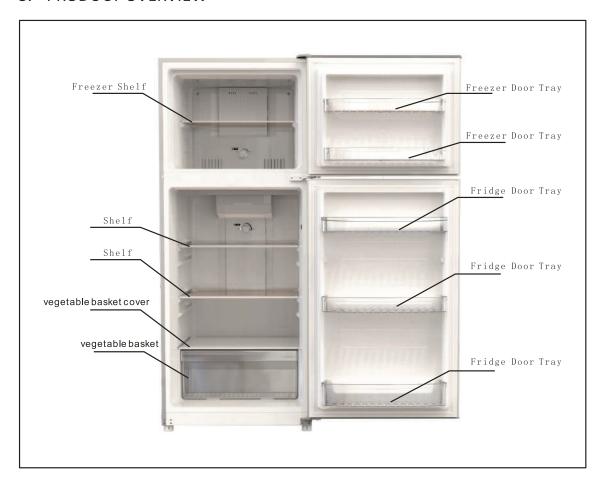

^{*}All images in this instruction manual are for indication only; please refer to your individual unit for details.

4. OPERATION

4.1 Switching On Your Unit

Thermostat	Freezer	Refrigerating
Under normal use, we recommend the food freezer and fresh-food storage knob is used to adjust the temperature in the "intermediate zone".	TEMP: NORMAL COLDER	TEMP. Control COOL COOLER
When ambient temperature around the refrigerator is below 10\(\text{M}\) for a long time or fast freeze is needed, we recommend food freezer knob is adjusted to the "right zone" position, and the fresh-food storage knob is adjusted to the "right of the middle zone".	TEMP. NORMAL COLDER	TEMP. Control COOL COOL COOL
When ambient temperature around the refrigerator is above 43\(\text{M} \) for a long time or fast cooling is needed, it is recommended the food freezer knob is adjusted to the "left zone", and the fresh-food storage knob is adjusted to the "right of the middle zone".	TEMP. Control	TEMP. Control COOL COOLER
Warning: When fresh-food storage knob (as shown in figure on the right), fast cool this position for a long time, the fresh-fo be lower than 0 \square .	TEMP. Control COOL COOLER	

4.2 Noise inside the Fridge!

- ◆ You may notice that your unit makes some unusual noises. Most of these are perfectly normal, but you should be aware of them!
- ◆ These noises are caused by the circulation of the refrigerant liquid in the cooling system. It has become more pronounced since the introduction of CFC free gases. This is not a fault and will not affect the performance of your unit. This is the compressor motor working, as it pumps the refrigerant around the system.

4.3 Tips for Keeping Food in the Fridge

- Cooked meats/fishes should always be stored on a shelf above raw meats/fishes to avoid bacterial transfer. Keep raw meats/fishes in a container which is large enough to collect juices and cover it properly. Place the container on the lowest shelf.
- ◆ Leave space around your food, to allow air to circulate inside the unit. Ensure all parts of the unit are kept cool.
- To prevent transfer of favors and drying out, pack or cover the food separately. Fruit and vegetables do not need to be wrapped.

- ♦ Always let pre-cook food cool down before you put in the fridge. This will help to maintain the internal temperature of the unit.
- ◆ To prevent cold air escaping from the fridge, limit the number of door opening times recommend open the door when you need to put food in or take food out.

4.4 Change the Light Bulb

◆ Lamp replacement by service technicians.

5. CLEANING

5.1 Defrosting

◆ Auto-defrost for Frost-free Refrigerator

5.2 Cleaning the Interior and the Exterior of the Unit

- Remove all the shelves and the salad bin before remove the salad bin first remove the lower door shelf.
- Wipe inside of the fridge with a bicarbonate soda and rinse with warm water using a"wrung-out" sponge or cloth. Wipe completely dry before replacing the shelves and salad bin.
- Use a damp cloth to clean the exterior. Ensure that the door is closed to prevent cleaning detergent stick to magnetic door seal or inside the fridge.
- ◆ The condenser grille behind fridge and the adjacent components can be vacuum using a soft brush attachment.

5.3 Cleaning Tips

 Condensation may appear on the outside of the unit. This may be due to a change in room temperature/humidity. Wipe off any moisture residue. If the problem continues, please contact service technician for assistance.

MAINTENANCE

6.1 Changing the Internal Light

◆ Lamp replacement by service technicians.

6.2 Care When Handling / Moving Your Fridge

 Hold the unit around its sides or base when moving it. Under no circumstances should it be lifted by holding the edges of the top surface.

6.3 Servicing required

The unit should be serviced by an authorized service technicians and only genuine spare parts should be used. Under no circumstances should you attempt to repair the unit by yourself or by inexperience persons as this may cause injury or product malfunction.

6.4 Switching osf for Long Periods (Holiday)

♦ When the unit is not in use for a long period of time, disconnect it from the mains supply, empty all food and clean the fridge, leaving the door ajar to prevent unpleasant smells.

7. Trouble shooting

The following simple issues can be handled by the user. Please call the after-sale service department if the issues are not settled.

Problem	Cause & Solution		
	Check that the power plug is properly connected.		
	• Is the temperature control on the display panel set to the correct		
The refrigerator does not work or	temperature? Try setting it to a lower temperature.		
does not chill sufficiently.	◆ Is the refrigerator in direct sunlight or located near a heat source?		
	• Is the back of the refrigerator close to the wall and keeping air from		
	circulating?		
	◆ Is the temperature control on the display panel set to the correct		
	temperature? Try set to higher temperature.		
The food in the fridge is frozen.	Is the temperature in the room very low?		
The lood in the mage is nozen.	Did you store the food with high water content in the coldest part of		
	the fridge?		
	Try move those items into the body of the fridge instead of keeping		
	them in the Cool Select Zone™ drawer		
	◆ Has a food item spoiled?		
Odor (unpleasant smell)	 Make sure strong smelling (for example, fish) is wrapped. 		
	Clean out your freezer periodically and remove any spoiled or food		
	◆ Check if the refrigerator is level and balance.		
	◆ Is the back of the refrigerator close to the wall and keeping air from		
Unusual noises or sounds	circulating?		
	Anything that drop behind or under the refrigerator?		
	◆ A "ticking" sound is heard from inside the refrigerator. This is normal		
	and occurs due to contracting or expanding in relation to the		
	temperature of the refrigerator interior		
The refrigerator door cannot be	◆ The freezer door is stuck by food packages;		
properly closed.	→ Too many food;		
,	◆ The refrigerator is tilt.		
Illuminating light switch off	◆ Check the refrigerator is connected to power,		
	♦ Whether the illuminating light is damaged.		
	It is normal that refrigerator operates for longer time in summer when		
	the ambient temperature is higher;		
Operation of compressor	 Do not put too many food in the freezer at one time; 		
	◆ Kept foods are cooled; not hot/warm.		
	◆ Frequent opening of refrigerator door.		

7.1 Tips:

- ◆ The refrigerator enclosure may emit heat during operation specially in summer, this is caused by the radiation of the condenser, and it is a normal.
- Condensation: condensation can be detected on the exterior surface and door seals of the freezer when the
 ambient humidity is large, this is a normal phenomenon, and the condensation can be wiped away with a dry
 towel.
- Buzz: Buzz will be generated by running compressor specially when starting up or shutting down.

8. TIPS FOR ENERGY SAVING

Try not to open the door too often, especially when the weather is wet and hot. Once you open the door, close it as soon as possible.

Every now and then check if the appliance is sufficiently ventilated (adequate air circulation behind the appliance). In normal temperature conditions, please arrange the thermostat at the middle setting.

Before loading the appliance with packages of fresh food, make sure they are cooled to ambient temperature. Ice and frost layer increase energy consumption, so clean the appliance as soon as the layer is 3-5 mm thick.

If it is the outer condenser, the rear wall should be always clean free of dust or any impurities.

- ◆ The appliance should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of the direct sunlight.
- ◆ Let hot foods cool to room temperature before store in the fridge. Please do not overloading the appliance it will forces the compressor to run longer. Foods that freeze too slowly may lose quality, or spoil.
- ◆ Be sure to wrap foods properly, and wipe containers dry before placing them in the appliance. This cuts down on frost build-up inside the appliance.
- ◆ Appliance storage bin should not be lined with aluminum foil, wax paper, or paper toweling. Liners interfere with cold air circulation, making the appliance less efficient.
- Organize and label food to reduce door openings. You may take as many items as needed at one time, and close the door as soon as possible.

9. DISPOSAL

Old units still have some residual value. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again. The refrigerant used in your unit and insulation materials require special disposal procedures. Ensure that none of the pipes on the back of the unit are damaged prior to disposal. Up to date information concerning options of disposing of your old unit and packaging from the new one can be obtained from your local council office.

When disposing of an old unit break of any old locks or latches and remove the door as a safeguard.

Correct Disposal of this product



Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

For more information, please contact the local authority or your retailer where you purchased the product.



Kota Damansara, Petaling Jaya (HQ)

6 Jalan TSB2, Taman Industri Sungai Buloh, Kota Damansara, 47000 Petaling Jaya, Selangor. **(~)** 03-615-777-25

(*) 03-615-777-25

012-228 5727

pacifica.my

